





Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
 Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
 Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
 Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb /
 Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
 Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu

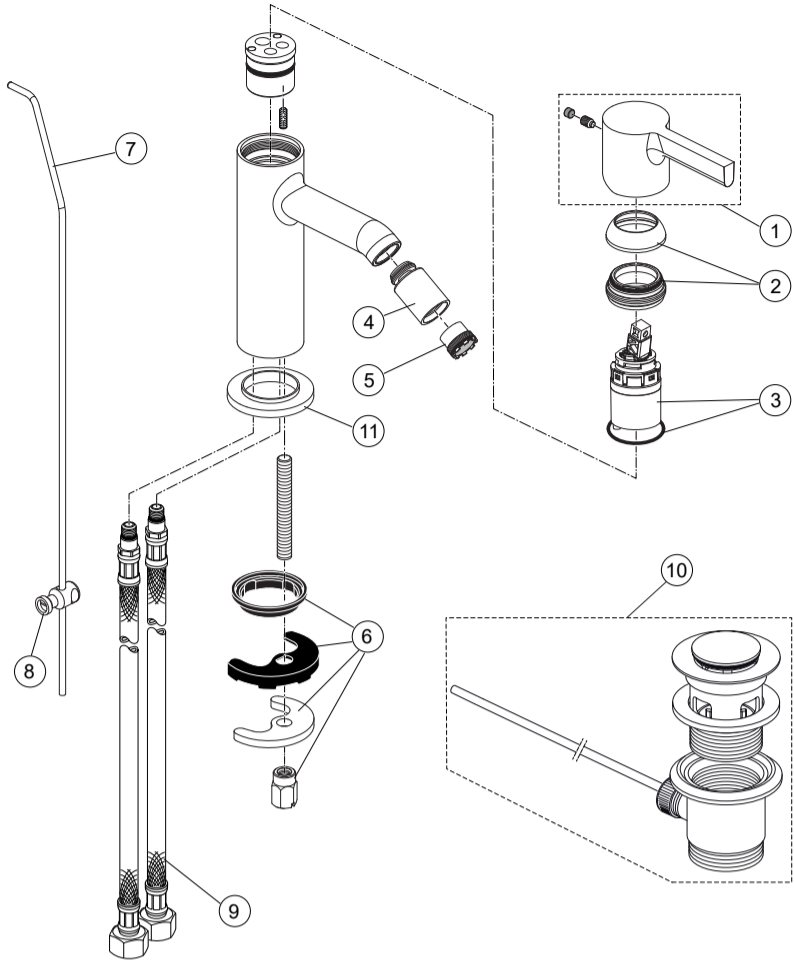


XX = AA, GN, ...

BC 784 ..	
Pos.	Part No.
1	A 861 419 XX
2	A 861 420 XX
3	A 861 397 NU
4	A 861 421 XX
5	A 962 708 NU
6	B 960 432 NU
7	B 960 900 XX
8	A 961 172 NU
9	A 962 370 NU
10	A 961 230 XX
11	A 861 277 XX

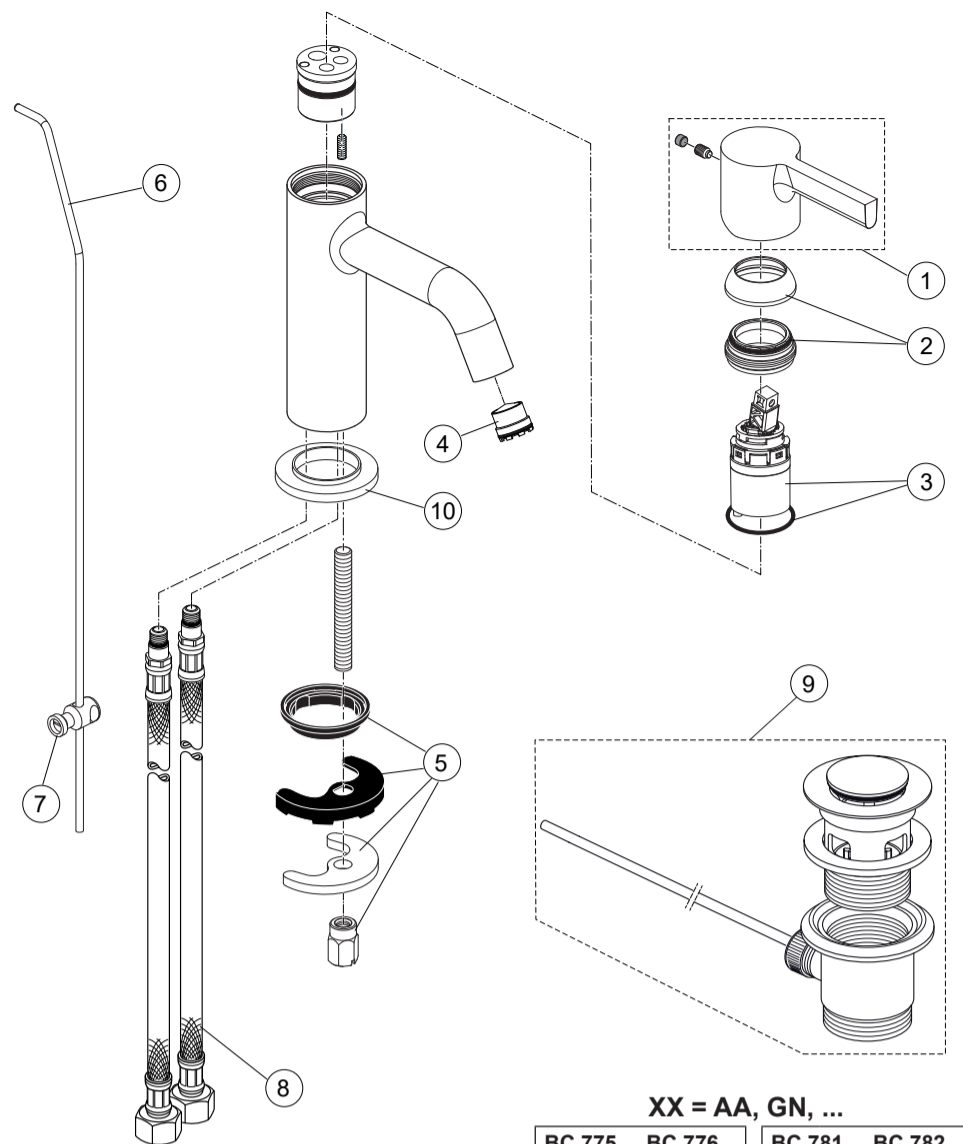


XX = AA, GN, ...

BC 775 .. BC 776 ..		BC 781 .. BC 782 ..	
Pos.	Part No.	Pos.	Part No.
1	A 861 419 XX	1	A 861 419 XX
2	A 861 420 XX	2	A 861 420 XX
3	A 861 397 NU	3	A 861 397 NU
4	A 960 197 NU	4	A 960 197 NU
5	B 960 432 NU	5	B 960 432 NU
6	B 960 900 XX	6	B 960 900 XX
7	A 961 172 NU	7	A 961 172 NU
8	A 962 370 XX	8	B 960 364 NU
9	A 961 230 XX	9	A 961 230 XX
10	A 861 277 XX	10	A 861 277 XX

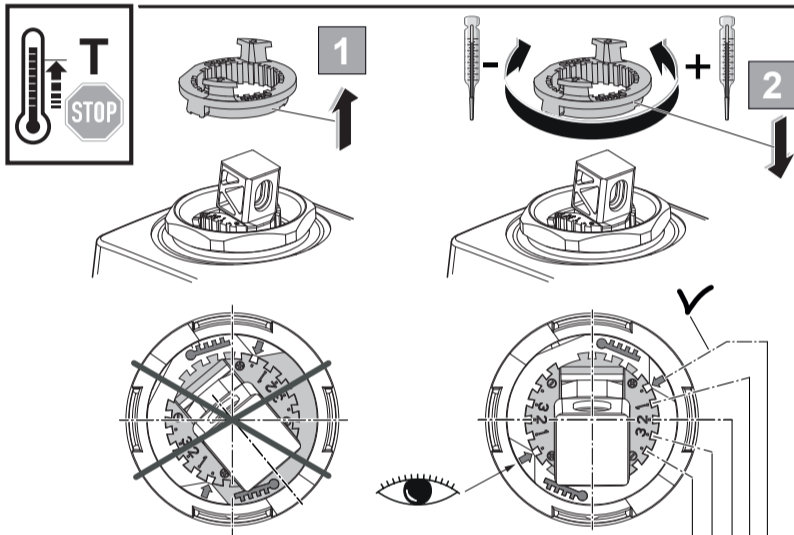

P 0,3 MPa 3 bar	50°C	15°C	4	3	2	1	0
			°C	°C	°C	°C	°C
50°C	15°C	27	33	41	48	50	
65°C	15°C	33	42	53	63	65	
85°C	15°C	41	53	68	83	85	



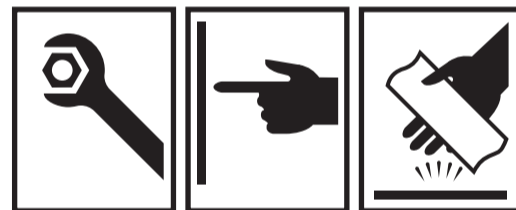


Ideal Standard

Joy








BC 775 .. BC 776 .. BC 781 ..
 BC 782 .. BC 784 ..

 0324 / A 868 630

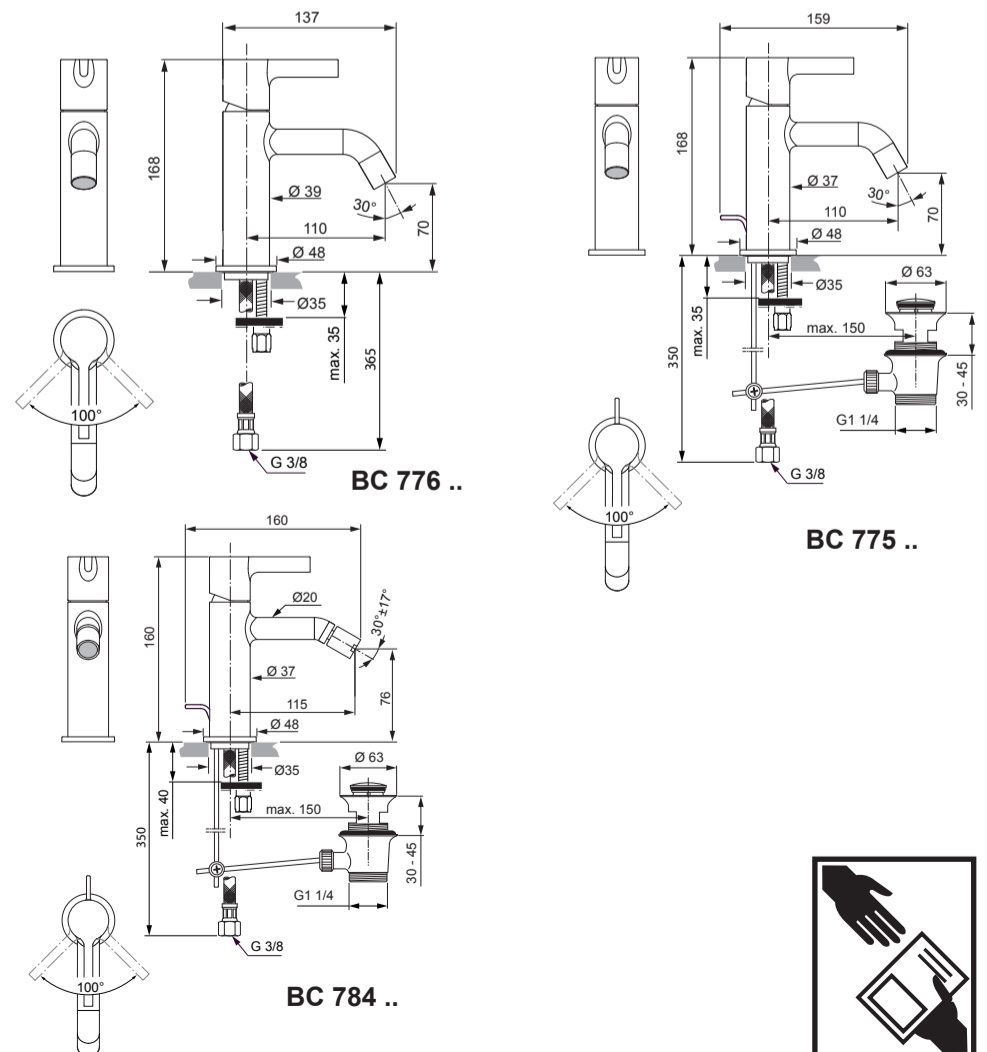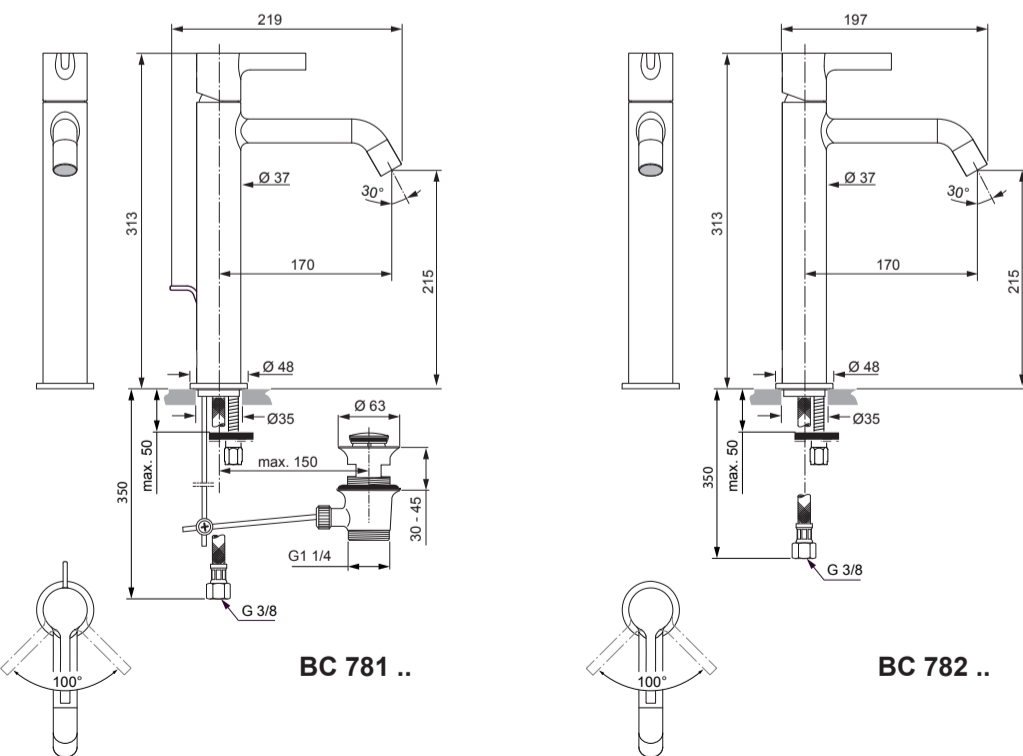

Ideal Standard International NV
 Corporate Village – Gent Building
 Da Vincilaan 2
 1935 Zaventem
 Belgium
<https://www.idealstandard.com>



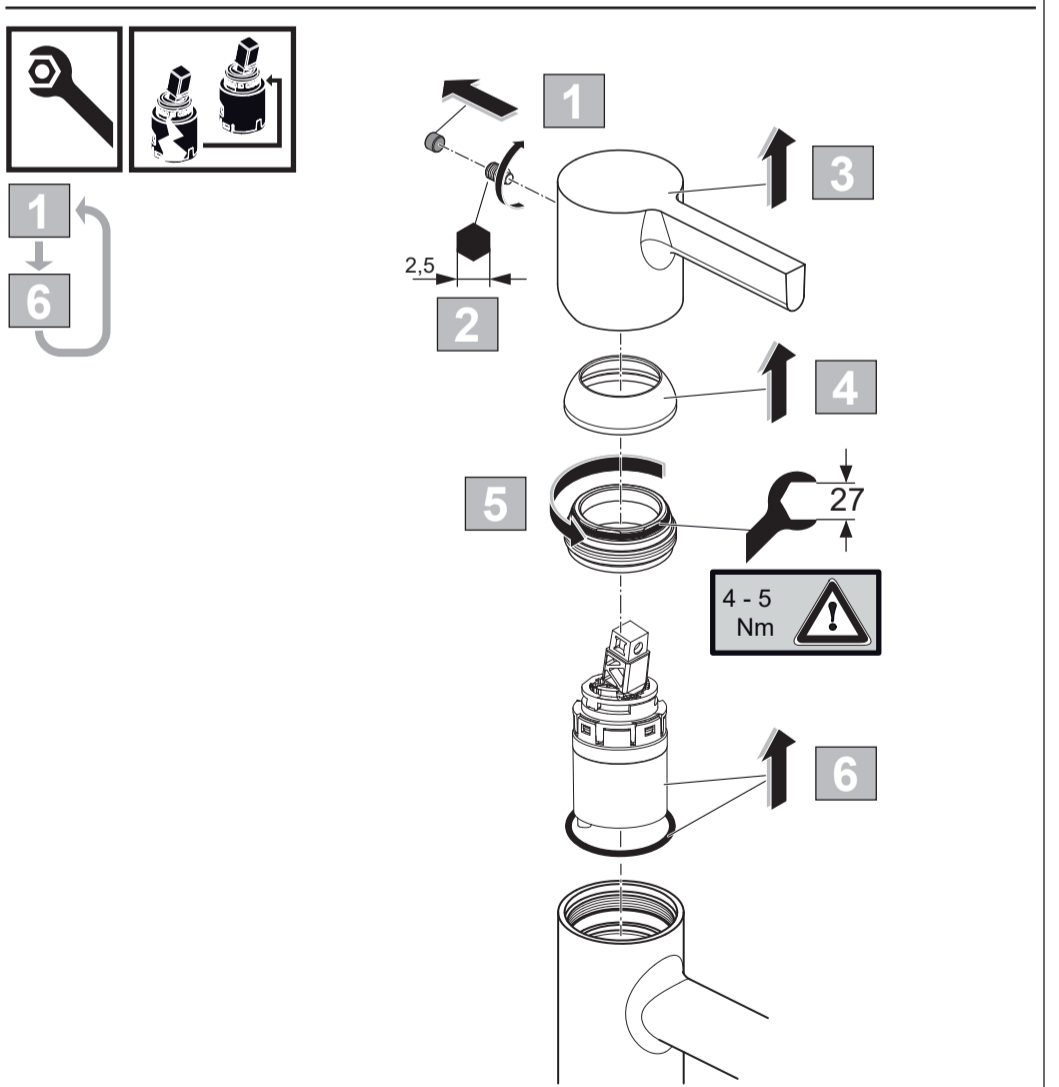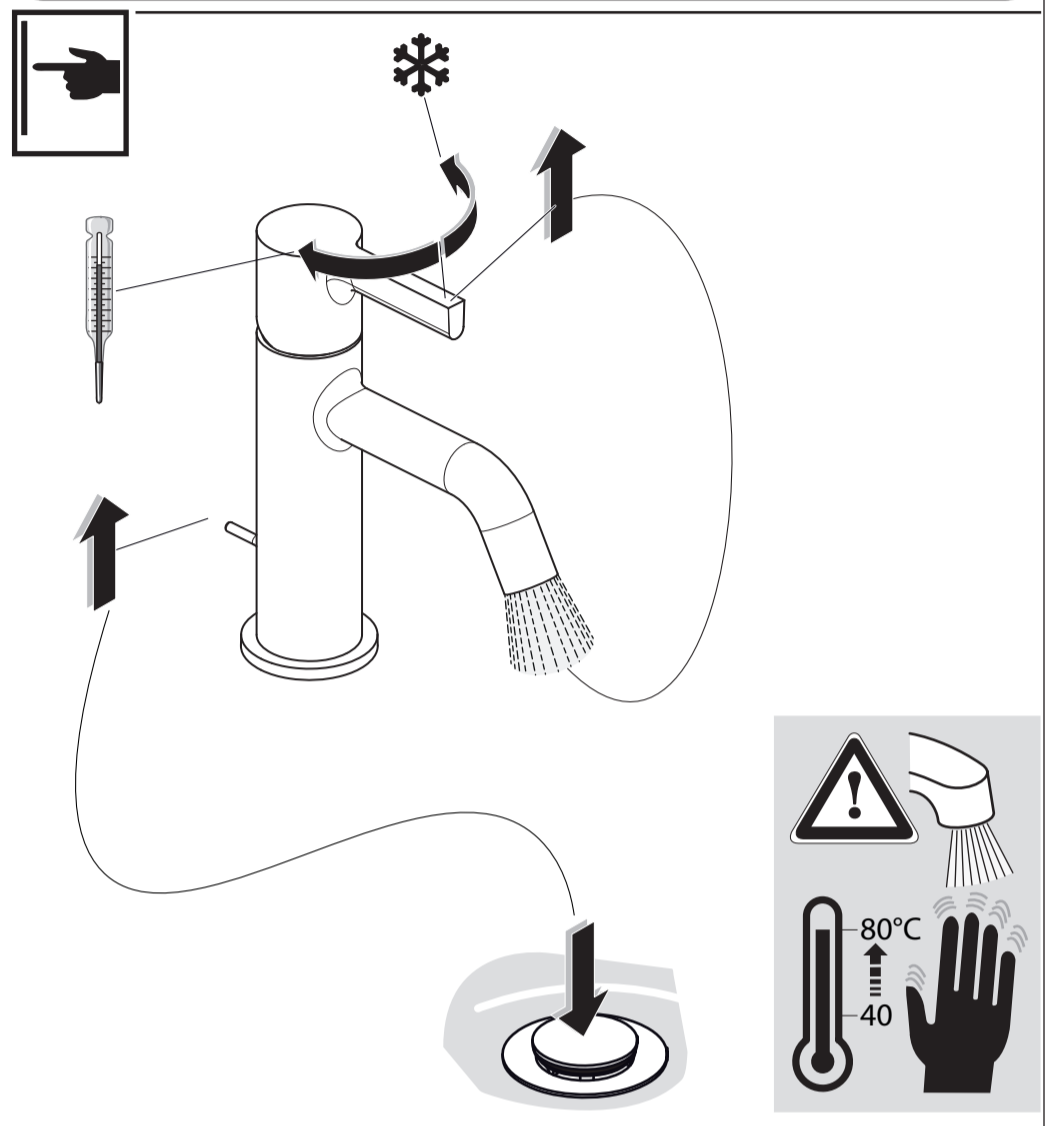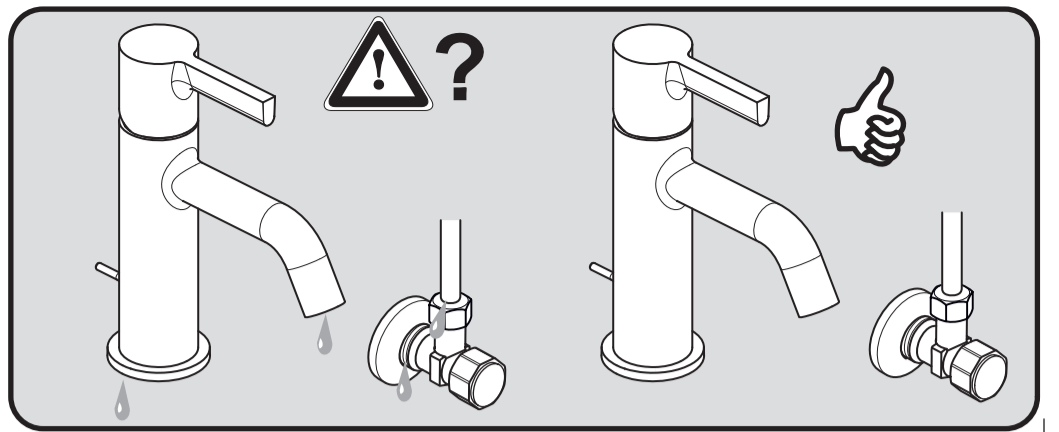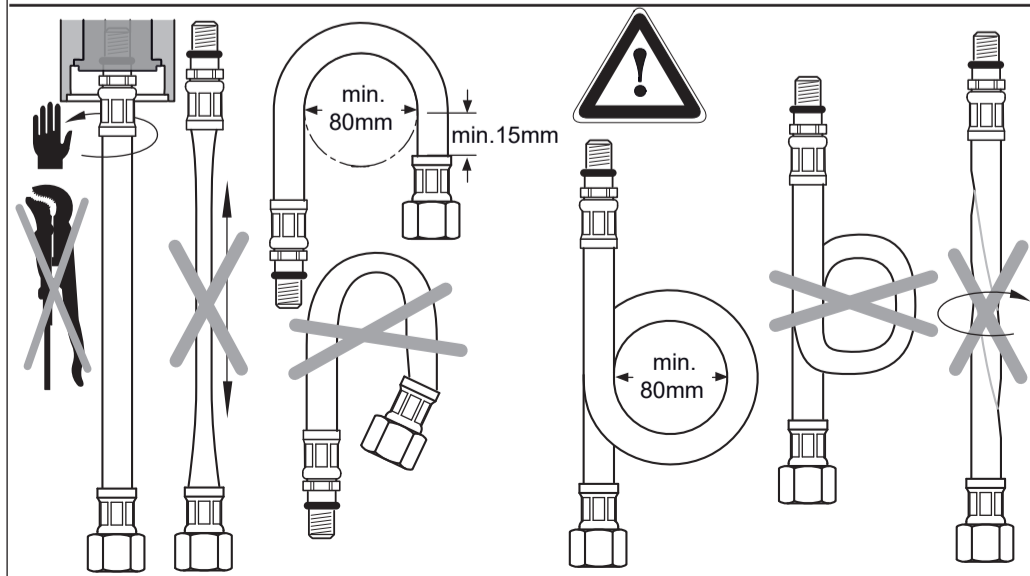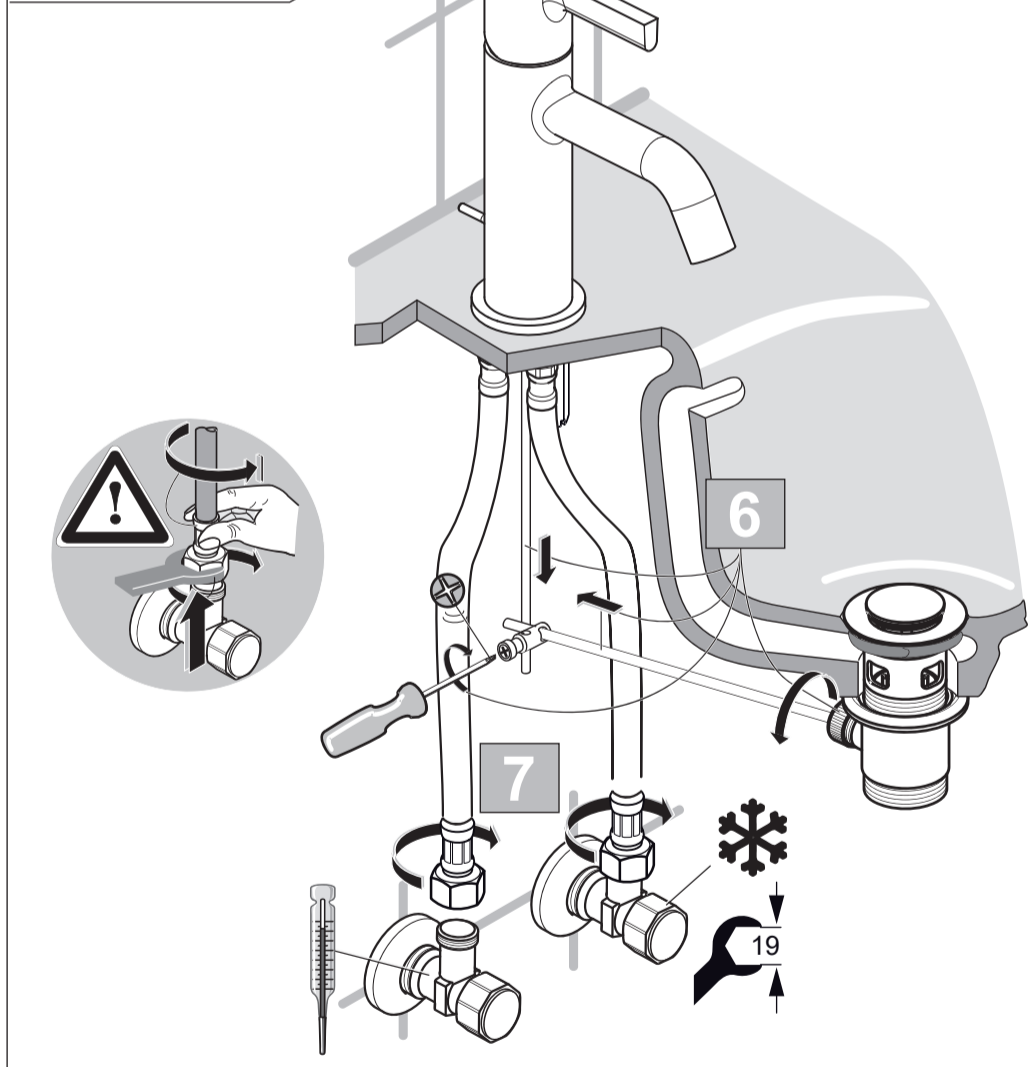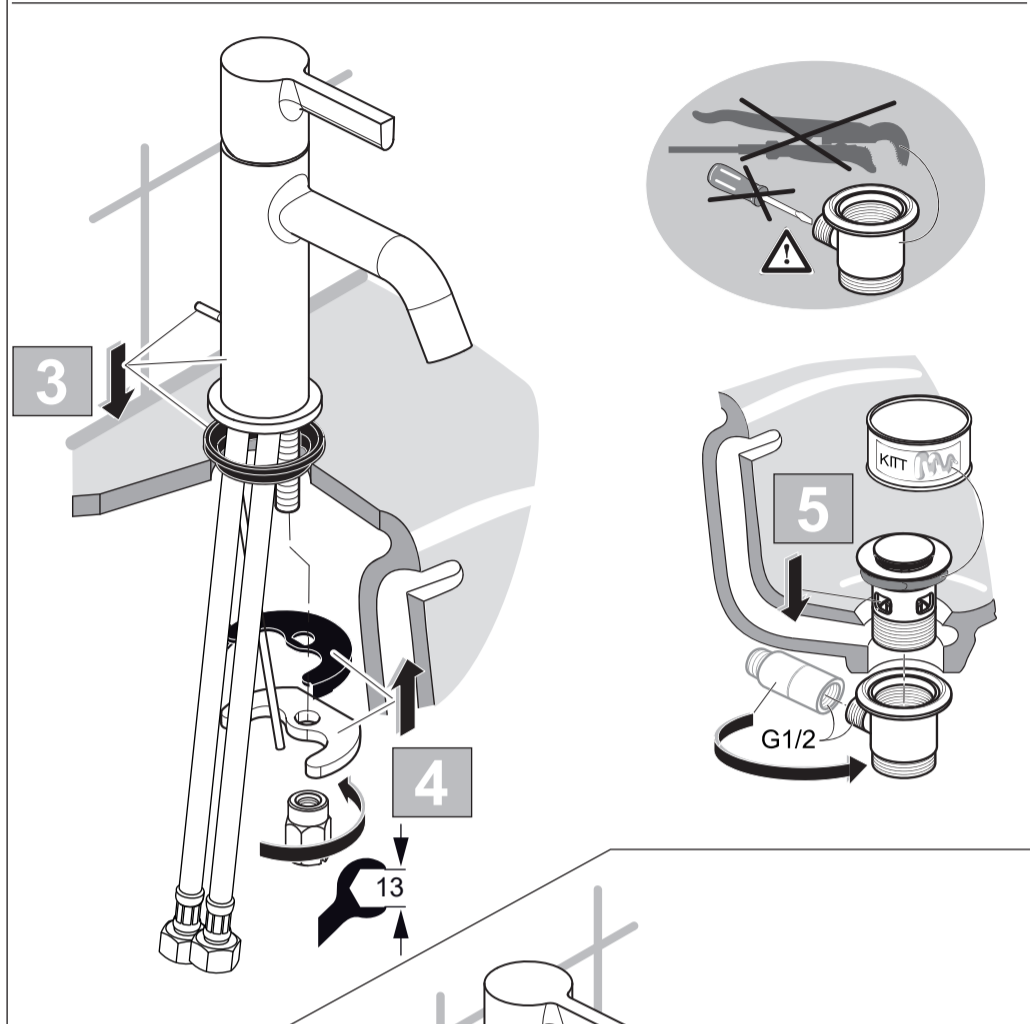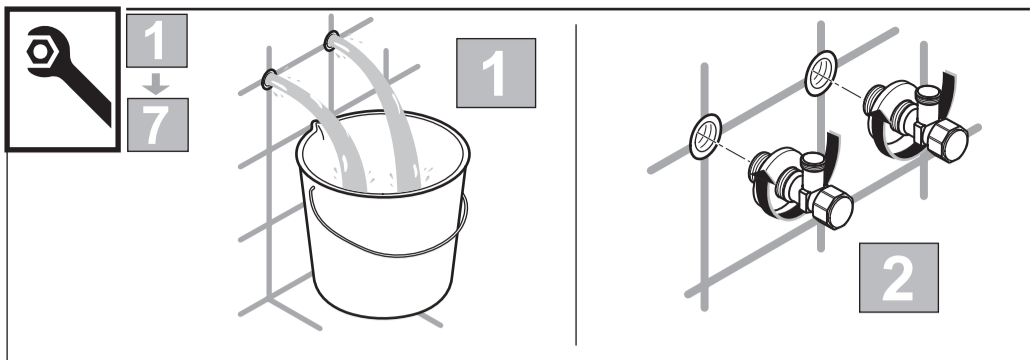

	P	bar		MAX. 10		5		Q	(3 bar)
	T	°C		MAX. 85		65		I/min	5