

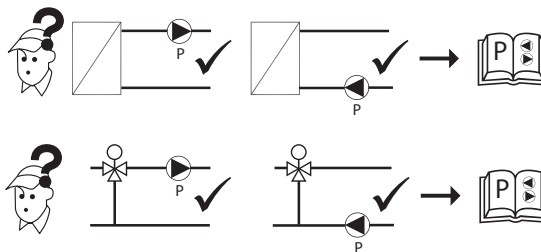
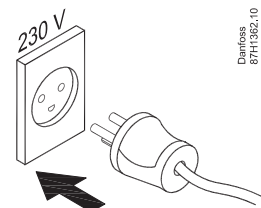
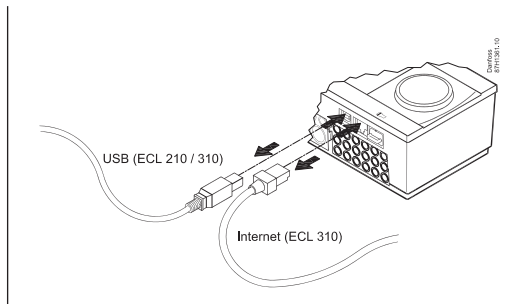


## Installation Guide

# ECL Comfort 310, A362, 230 V a.c. (code no. 087H3845)

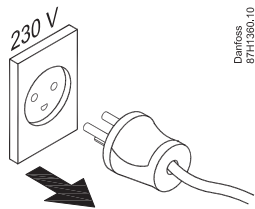


## A362.1, ex. a

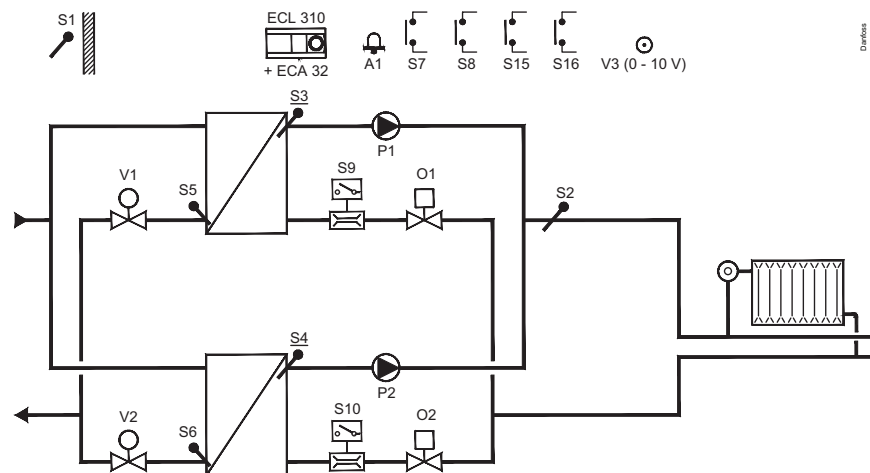


	GB	D	DK
V1 / V2	0 - 10 V-controlled	0 - 10 V-gesteuert	0 - 10 V-styret

A362.1, ex. b

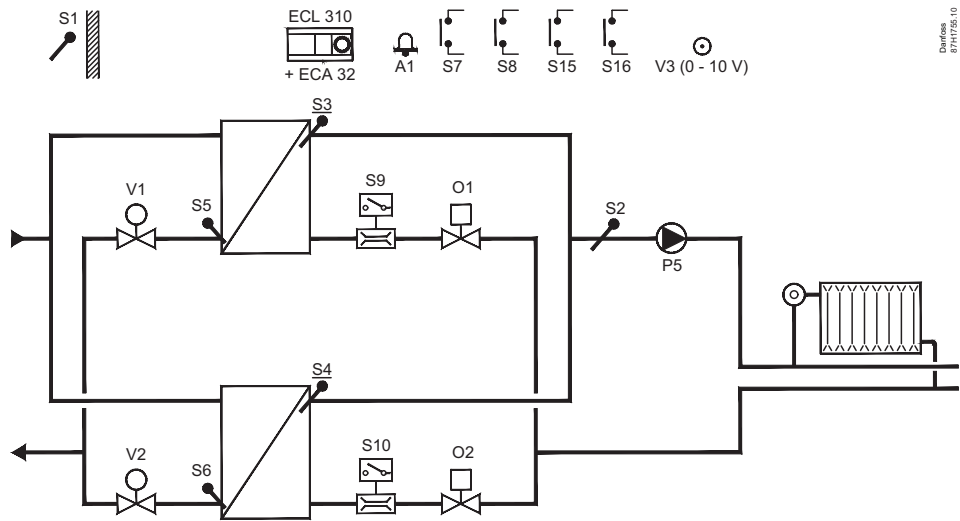


A362.1, ex. c

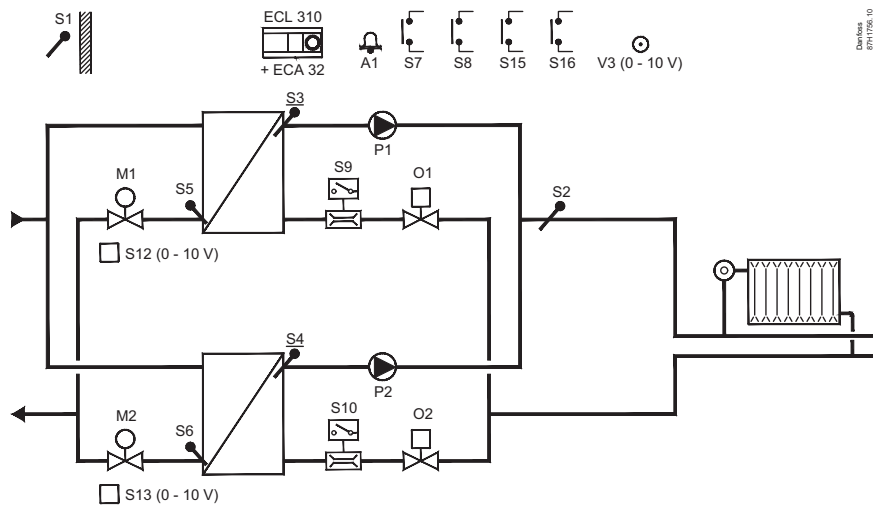


	GB	D	DK
M1 / M2	3-point-controlled	3-Punkt-gesteuert	3-punkt-styret

**A362.1, ex. c**

**P1 / P2**

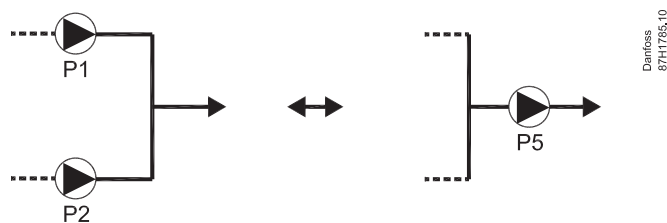


**A362.1, ex. d**

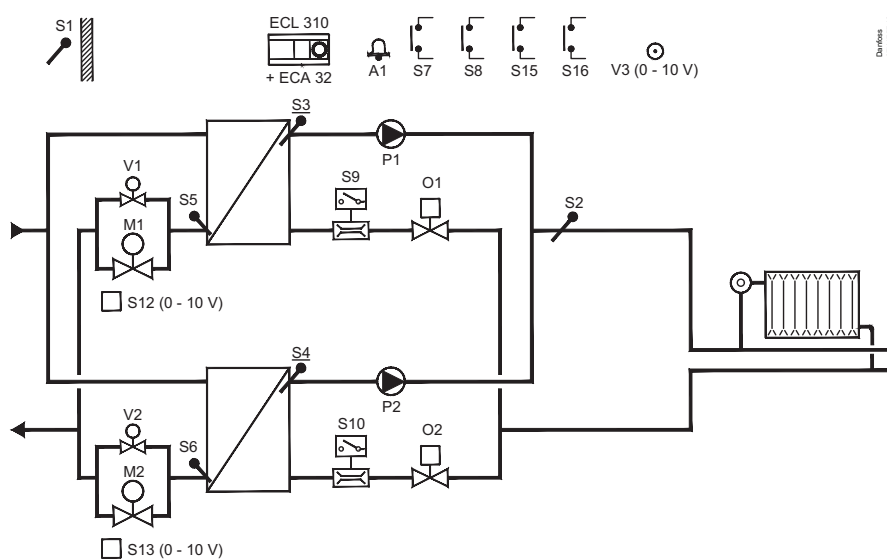


	GB	D	DK
M1 / M2	3-point-controlled	3-Punkt-gesteuert	3-punkt-styret
V1 / V2	0 - 10 V-controlled	0 - 10 V-gesteuert	0 - 10 V-styret

**A362.1, ex. d**

**P1 / P2**

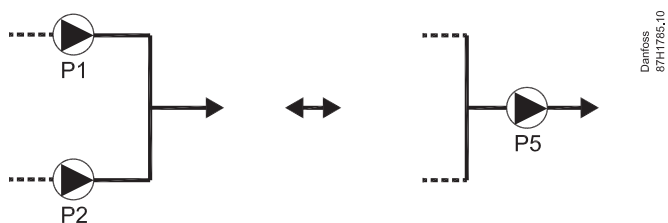


**A362.1, ex. f**

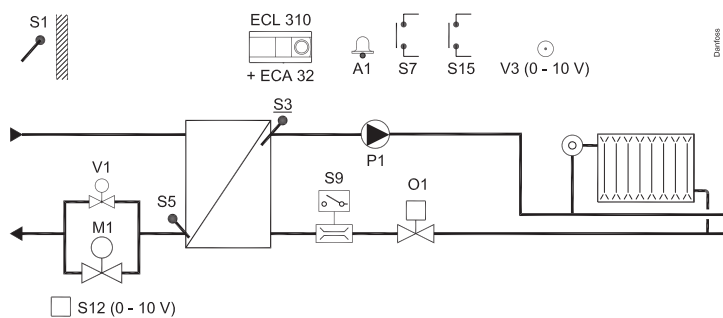



	GB	D	DK
M1	3-point-controlled	3-Punkt-gesteuert	3-punkt-styret
V1	0 - 10 V-controlled	0 - 10 V-gesteuert	0 - 10 V-styret

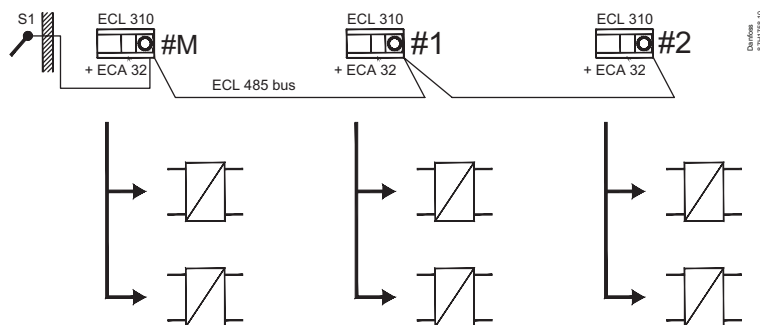**A362.1**




	GB	D	DK
#M	Master (address 15)	Hauptregler (Adresse 15)	Master (adresse 15)
#1	Slave (address 1)	Folgregler (Adresse 1)	Slave (adresse 1)
#2	Slave (address 2)	Folgregler (Adresse 2)	Slave (adresse 2)


ECL Comfort 310:  
230 V a.c.

R 	4 (2) A / 230 V a.c.
Tr 	0,2 A / 230 V a.c.

ECL Comfort 310:


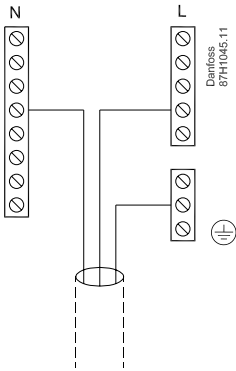


A362.1  
230 V a.c.

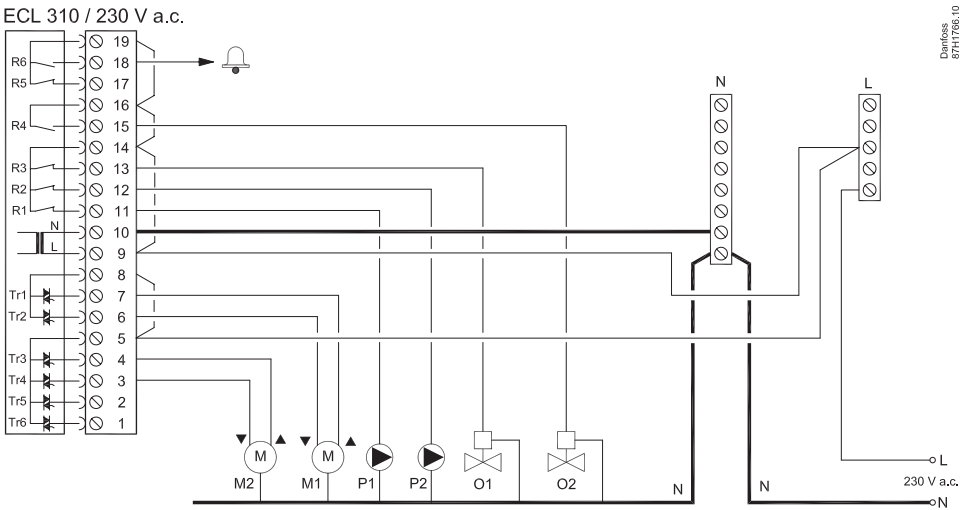


## A362.1

### P5

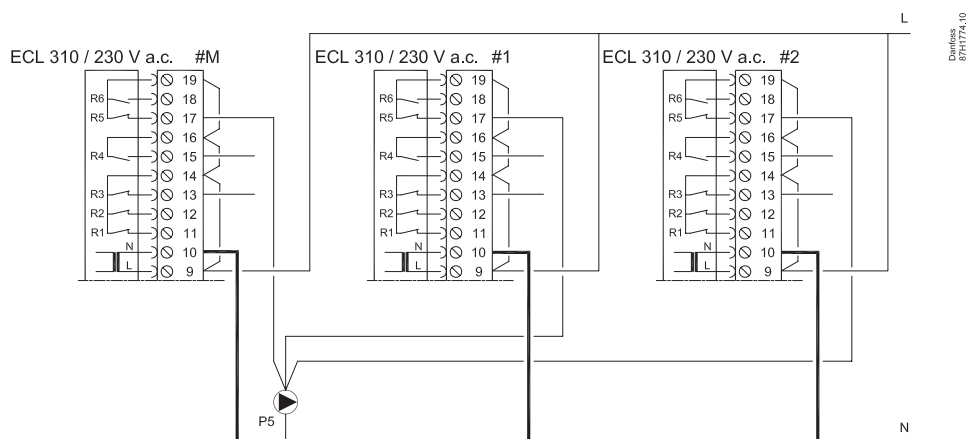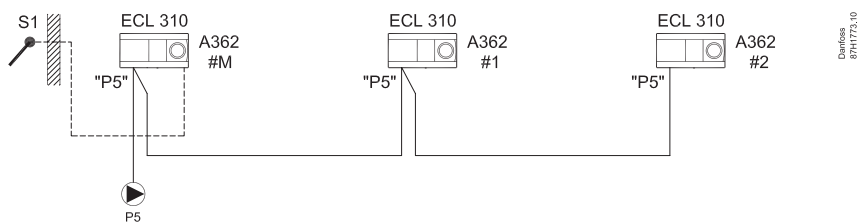


	GB	D	DK
#M	Master (address 15)	Hauptregler (Adresse 15)	Master (adresse 15)
#1	Slave (address 1)	Folgeregler (Adresse 1)	Slave (adresse 1)
#2	Slave (address 2)	Folgeregler (Adresse 2)	Slave (adresse 2)


**A362.1**  
**V1, V2**

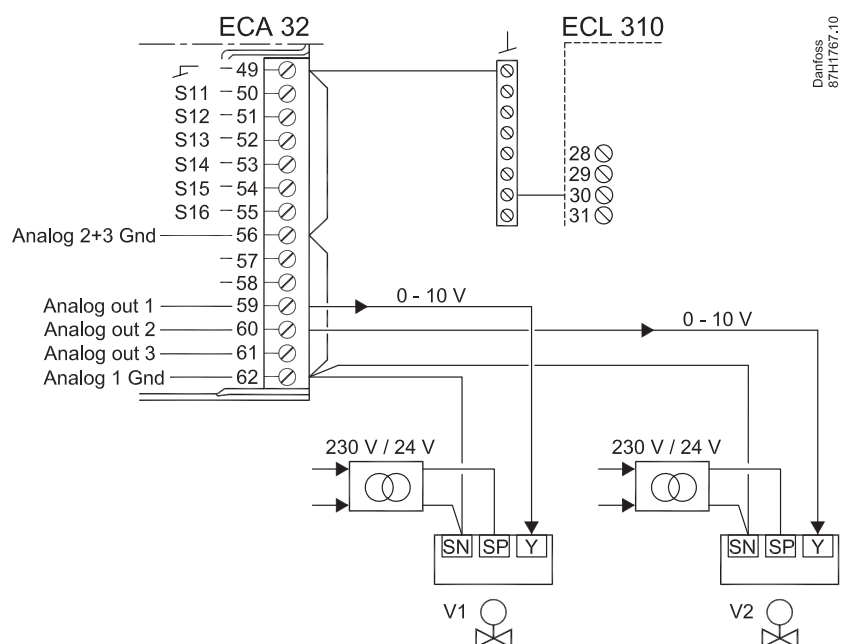

**A362.1**  
**V3**

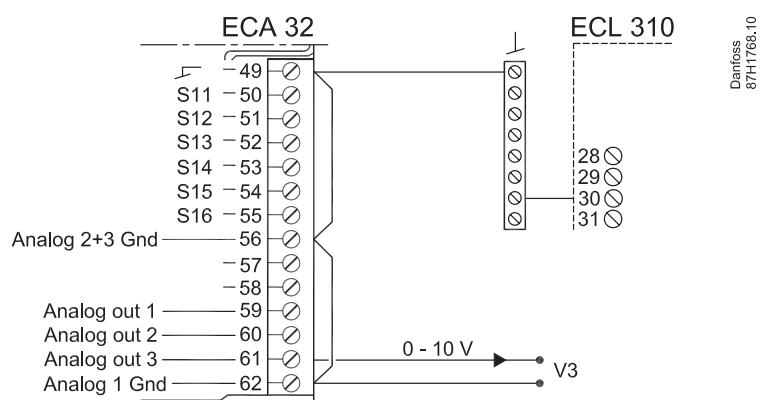



### 1-step closing

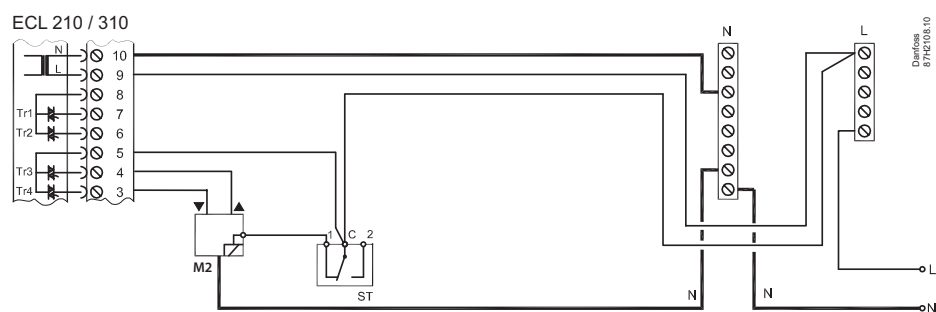




**230 V a.c. / 24 V a.c. , safety thermostat**


**2-step closing**

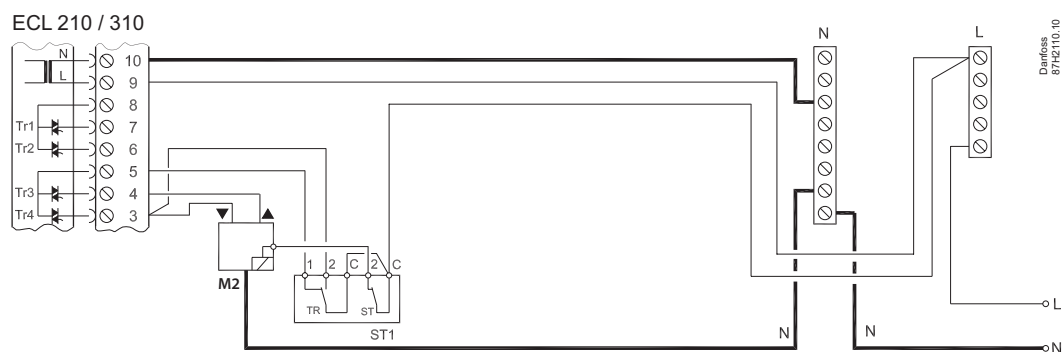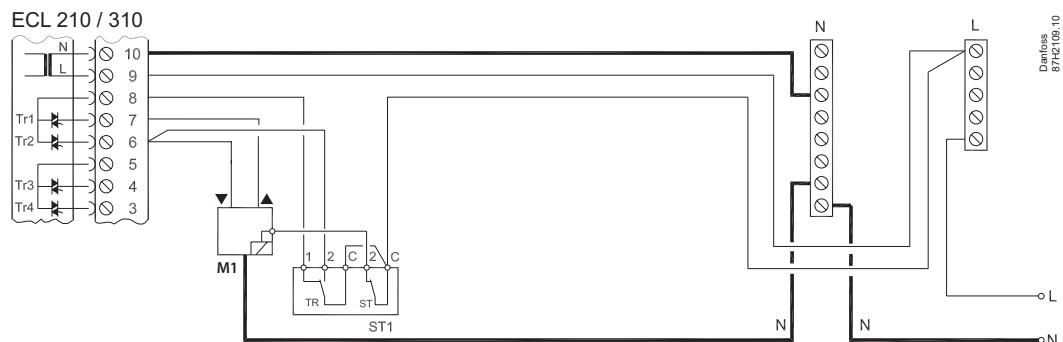

 **Pt 1000** (1000 Ω / 0 °C)

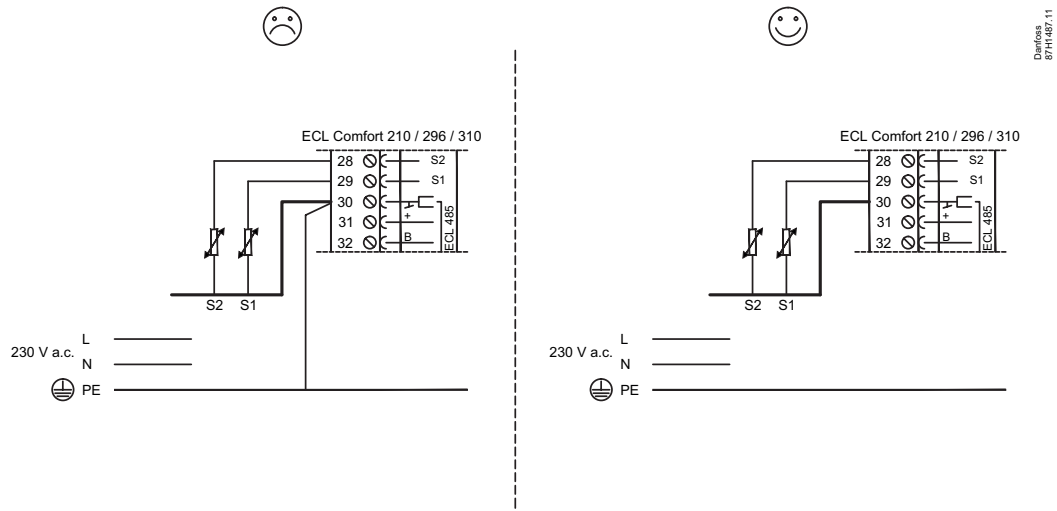

A362.1

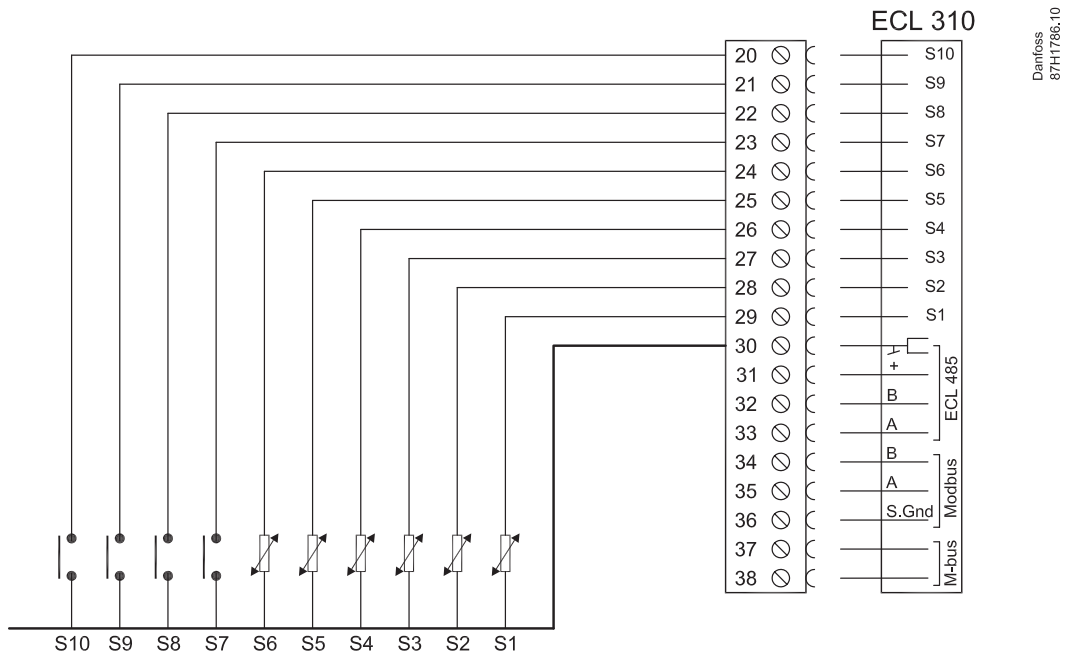


**A362.1**

**S9 / S10**





**A / B ?**

 **A:**




**B:**

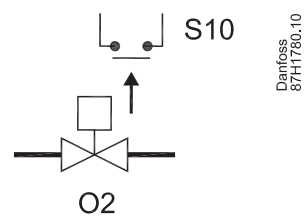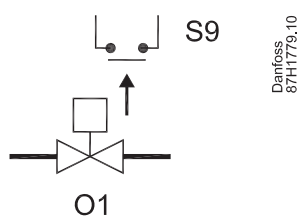


**A362.1 (ex. c, ex. d)**


**S12, S13**

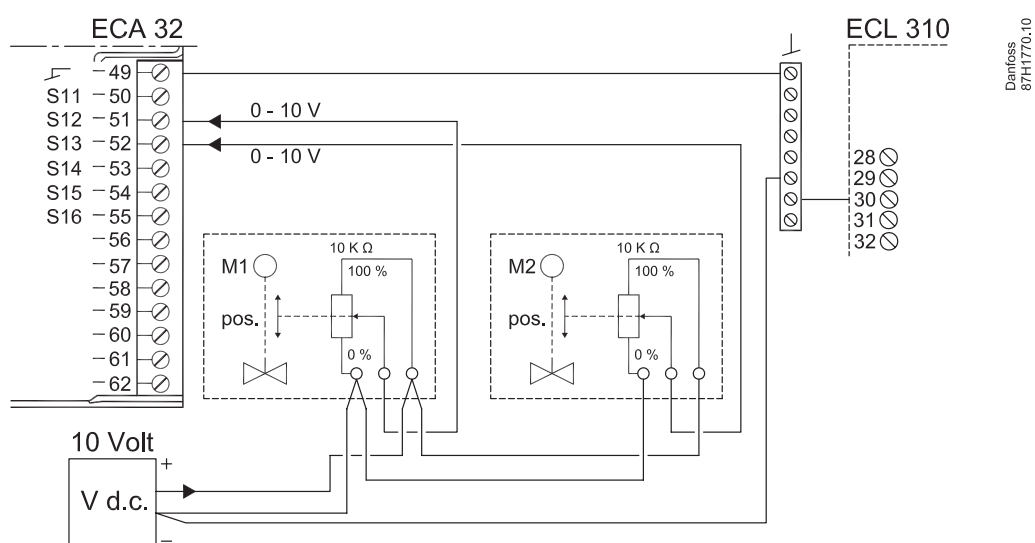


**A362.1**  
**S15, S16**

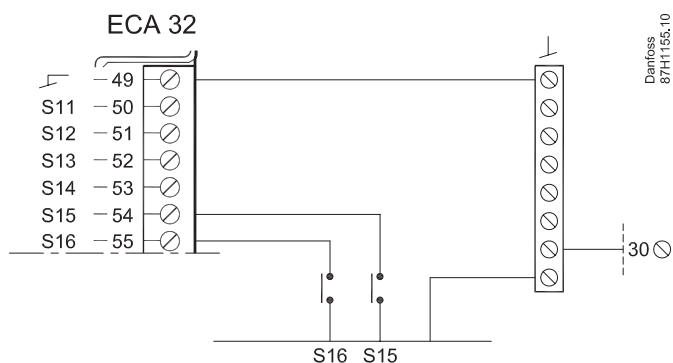


**ECA 30 / 31**

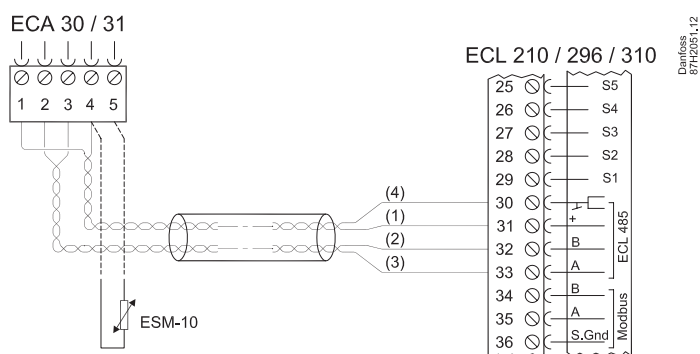


**ECA 30 / 31**

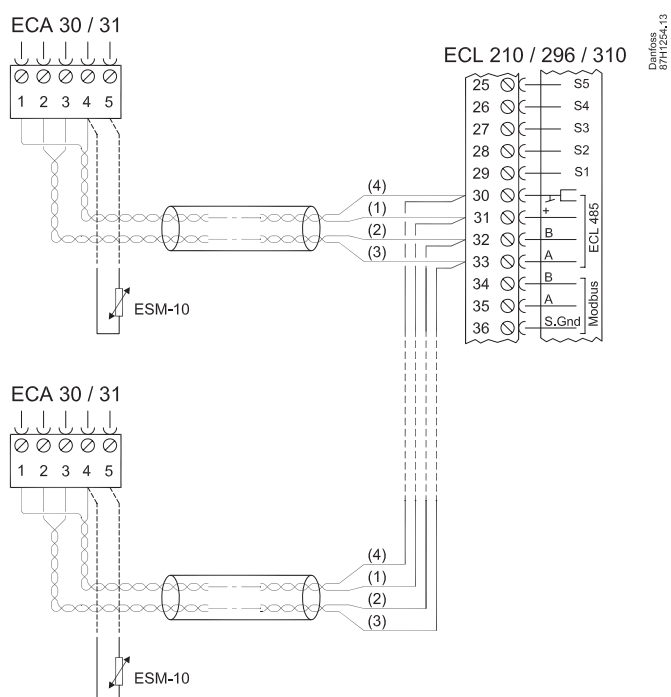


## Master / slave

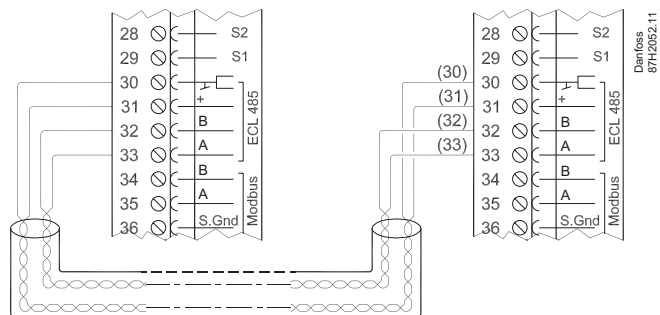


## Modbus

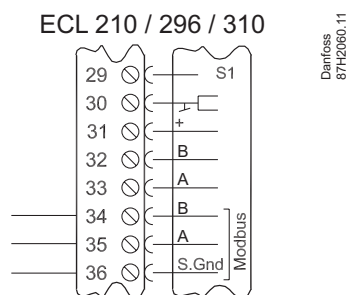



## M-bus

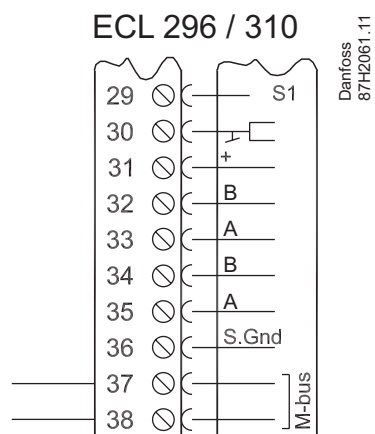

## M-bus

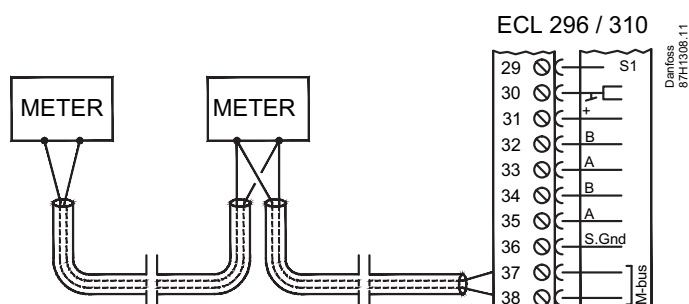


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

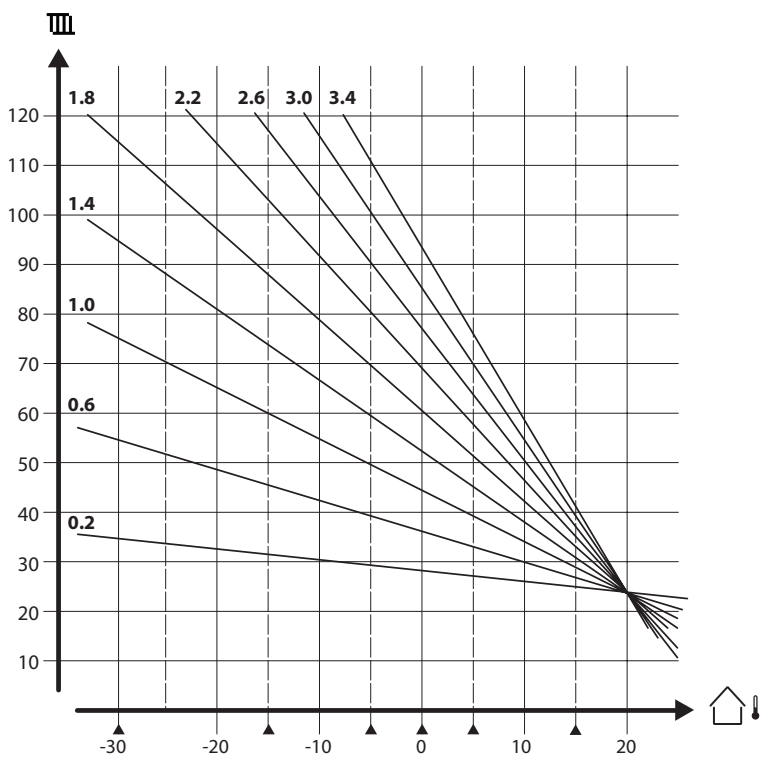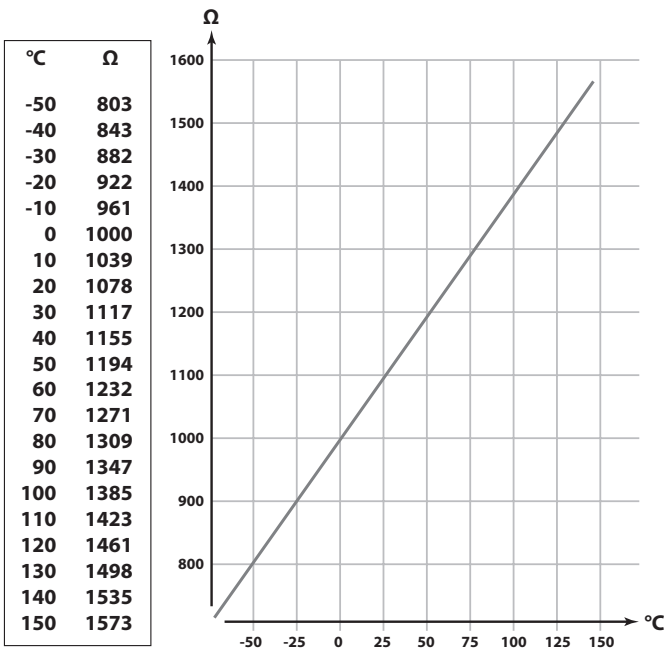


ECA 30


1

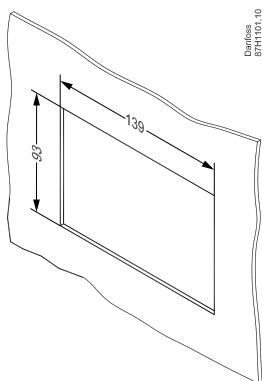


2

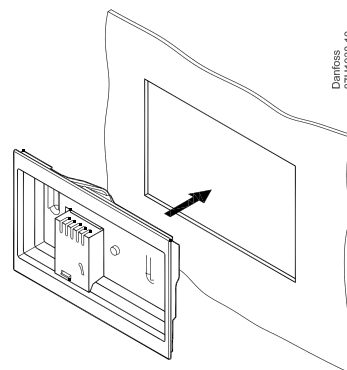


3

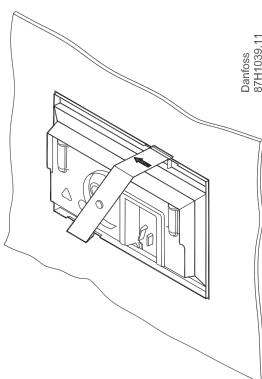


4

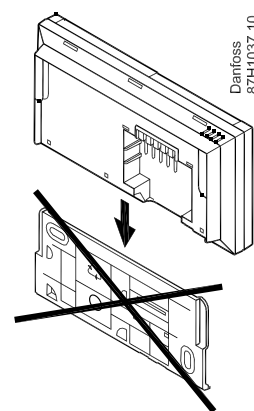


5

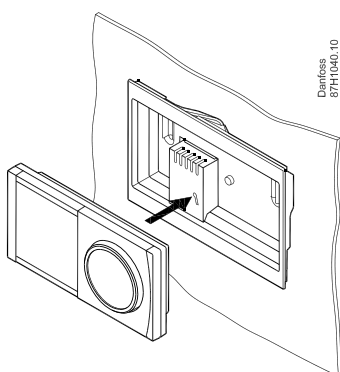


6

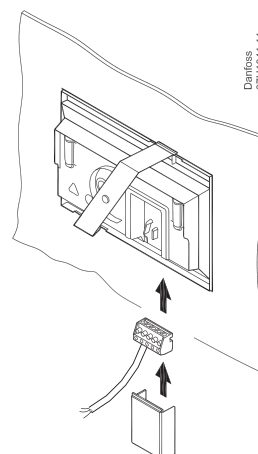

7

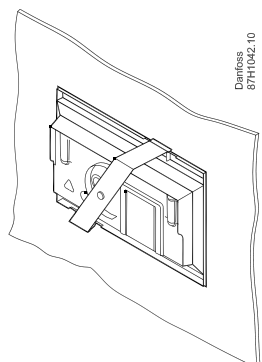


8

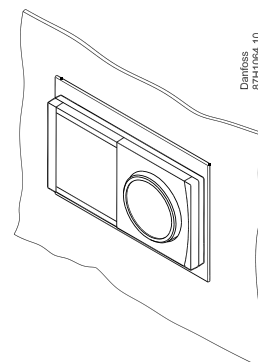


# Installation Guide, ECL Comfort 310, A362


Danfoss  
87H1021.11

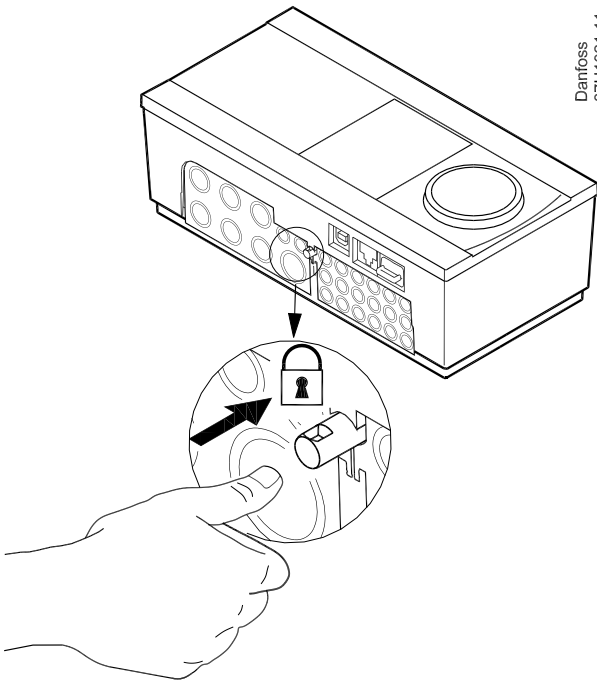


Danfoss  
87H1017.11

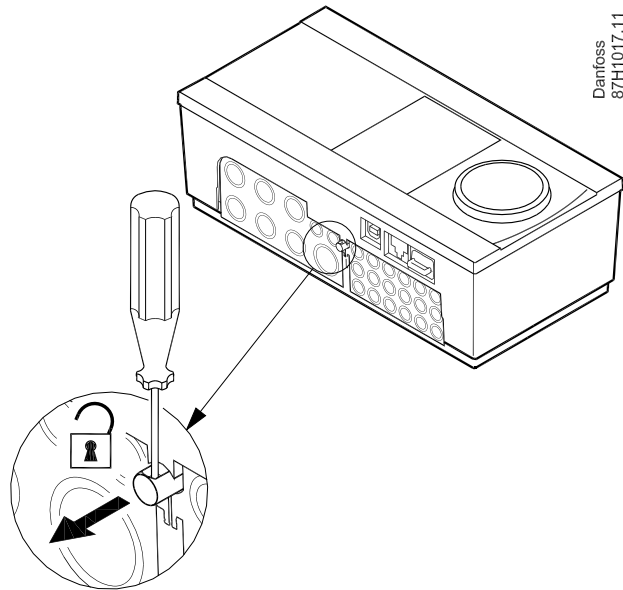

Danfoss  
87H1073.11

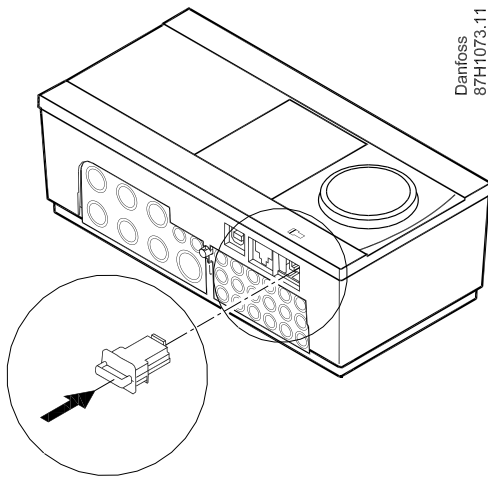

Danfoss  
87H1074.11

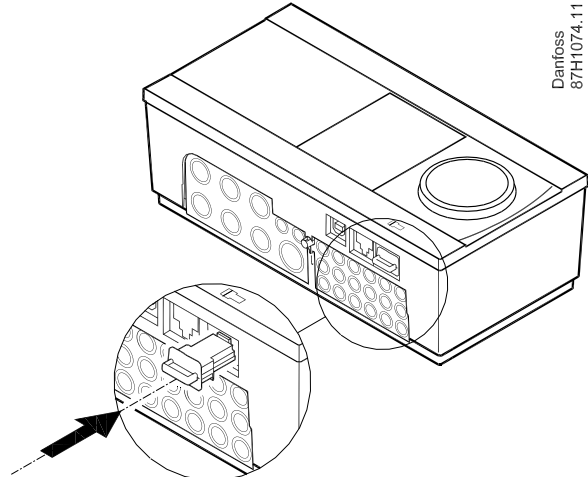

?  **ECL Comfort 310, A362: [www.danfoss.com](http://www.danfoss.com)**

?  **<https://www.youtube.com/user/Danfoss> Climate Solutions for heating  
-> Playlists -> How-to Videos -> District Energy installation videos**



## Danfoss A/S

Climate Solutions • [danfoss.com](http://danfoss.com) • +45 7488 2222



Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.