



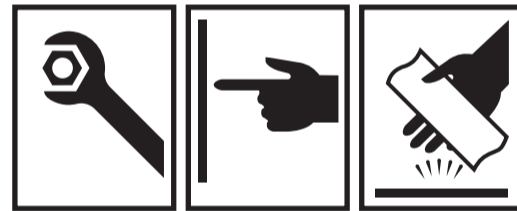

Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /  
 Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /  
 Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /  
 Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb  
 / Rendelhető alkatrészek / Зпасні частини / Reservni delovi / Резервни делови /  
 Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu

XX = AA, GN, ...

Pos.	Part No.
1	B 961 664 XX
2	A 861 478 XX
3	A 861 243 NU
	A 861 244 NU
4	H 960 279 NU
5	A 861 479 XX
6	A 963 197 NU
7	A 962 708 NU
8	A 962 963 NU
9	A 961 302 NU
10	A 962 342 NU
11	A 963 007 NU
12	A 961 230 XX
13	A 962 499 NU

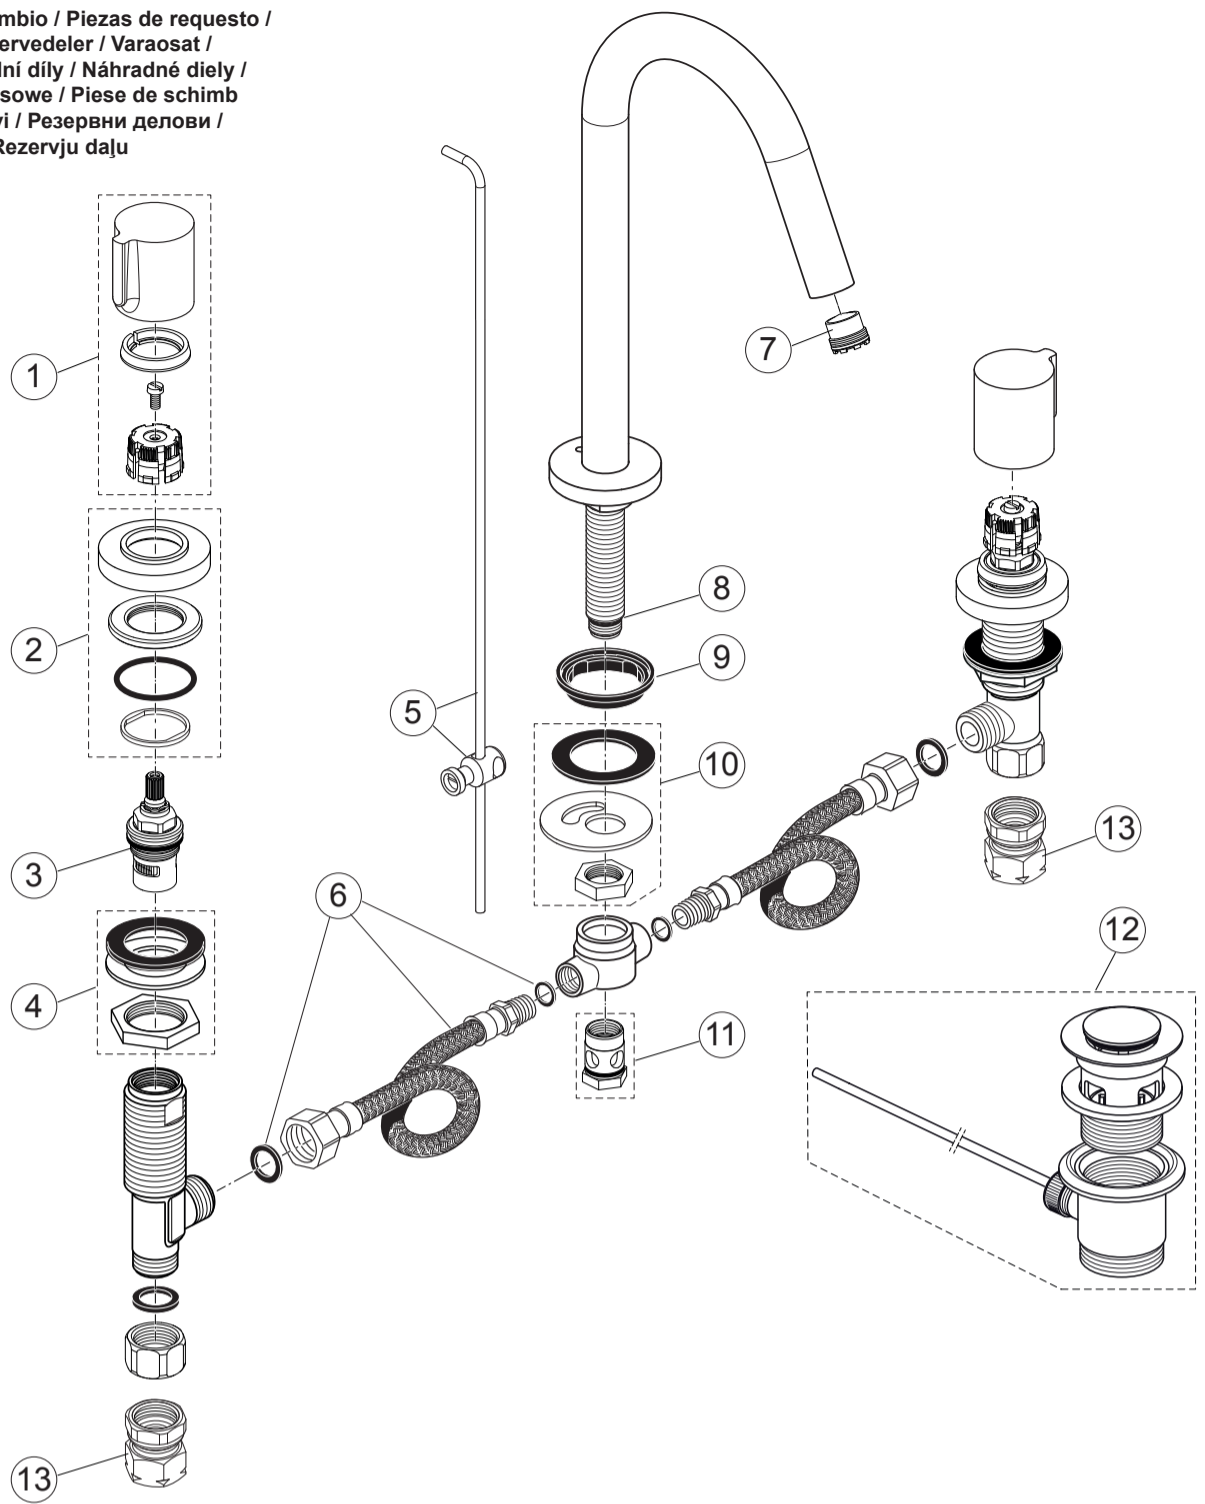


Ideal Standard

Joy


BC 783 ..






1120 / A 868 631

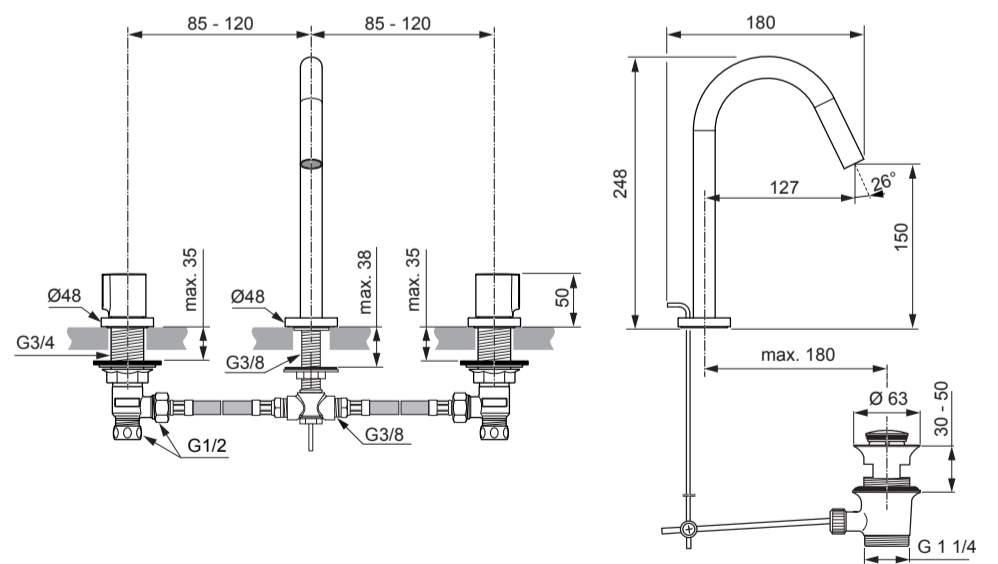

Ideal Standard International NV  
 Corporate Village - Gent Building  
 Da Vincilaan 2  
 1935 Zaventem  
 Belgium

www.idealstandardinternational.com

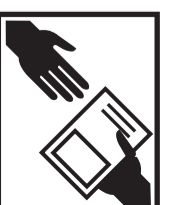

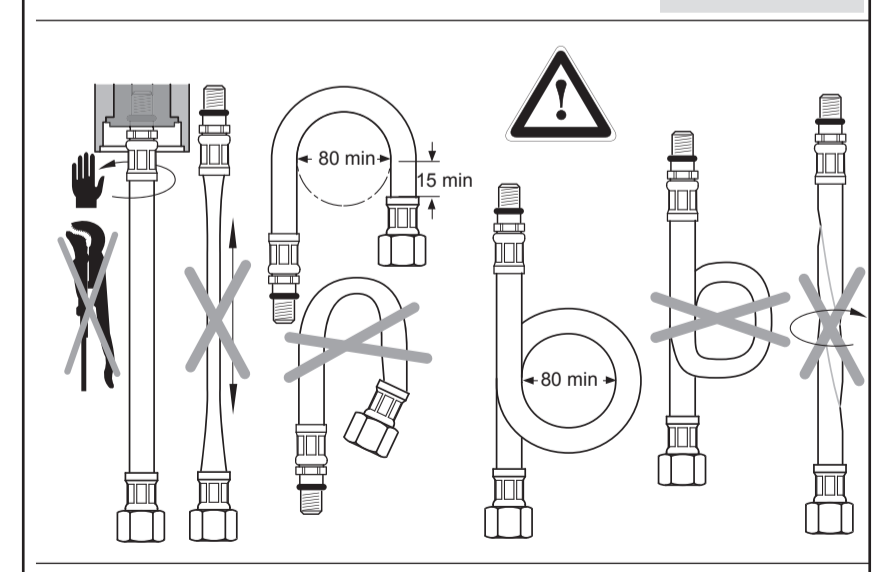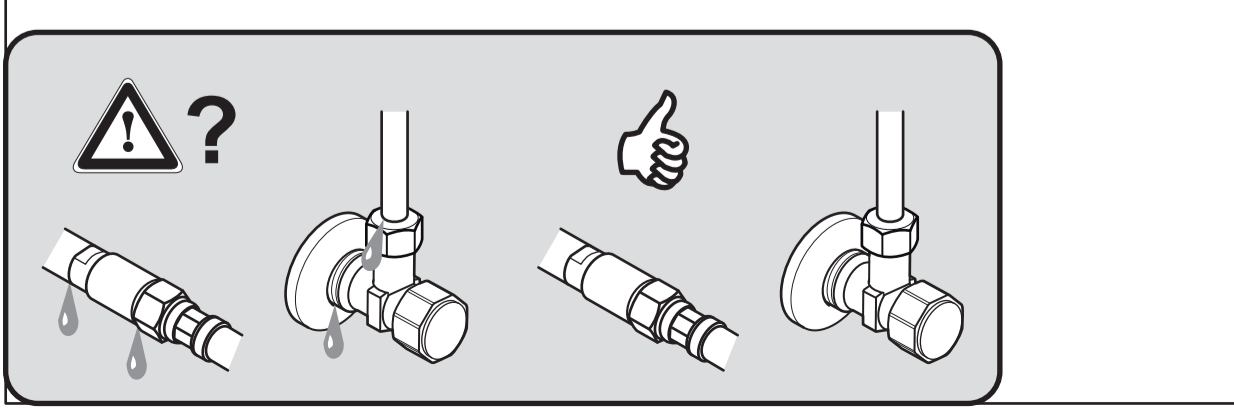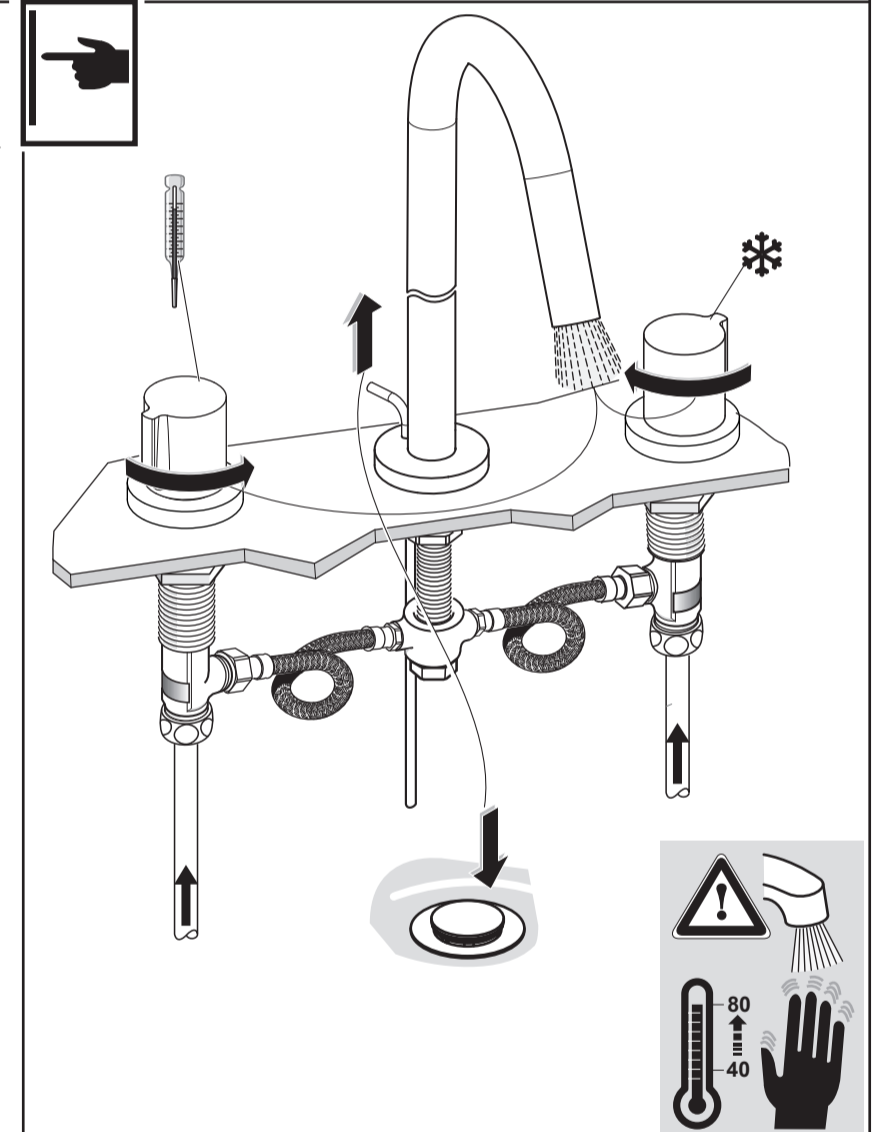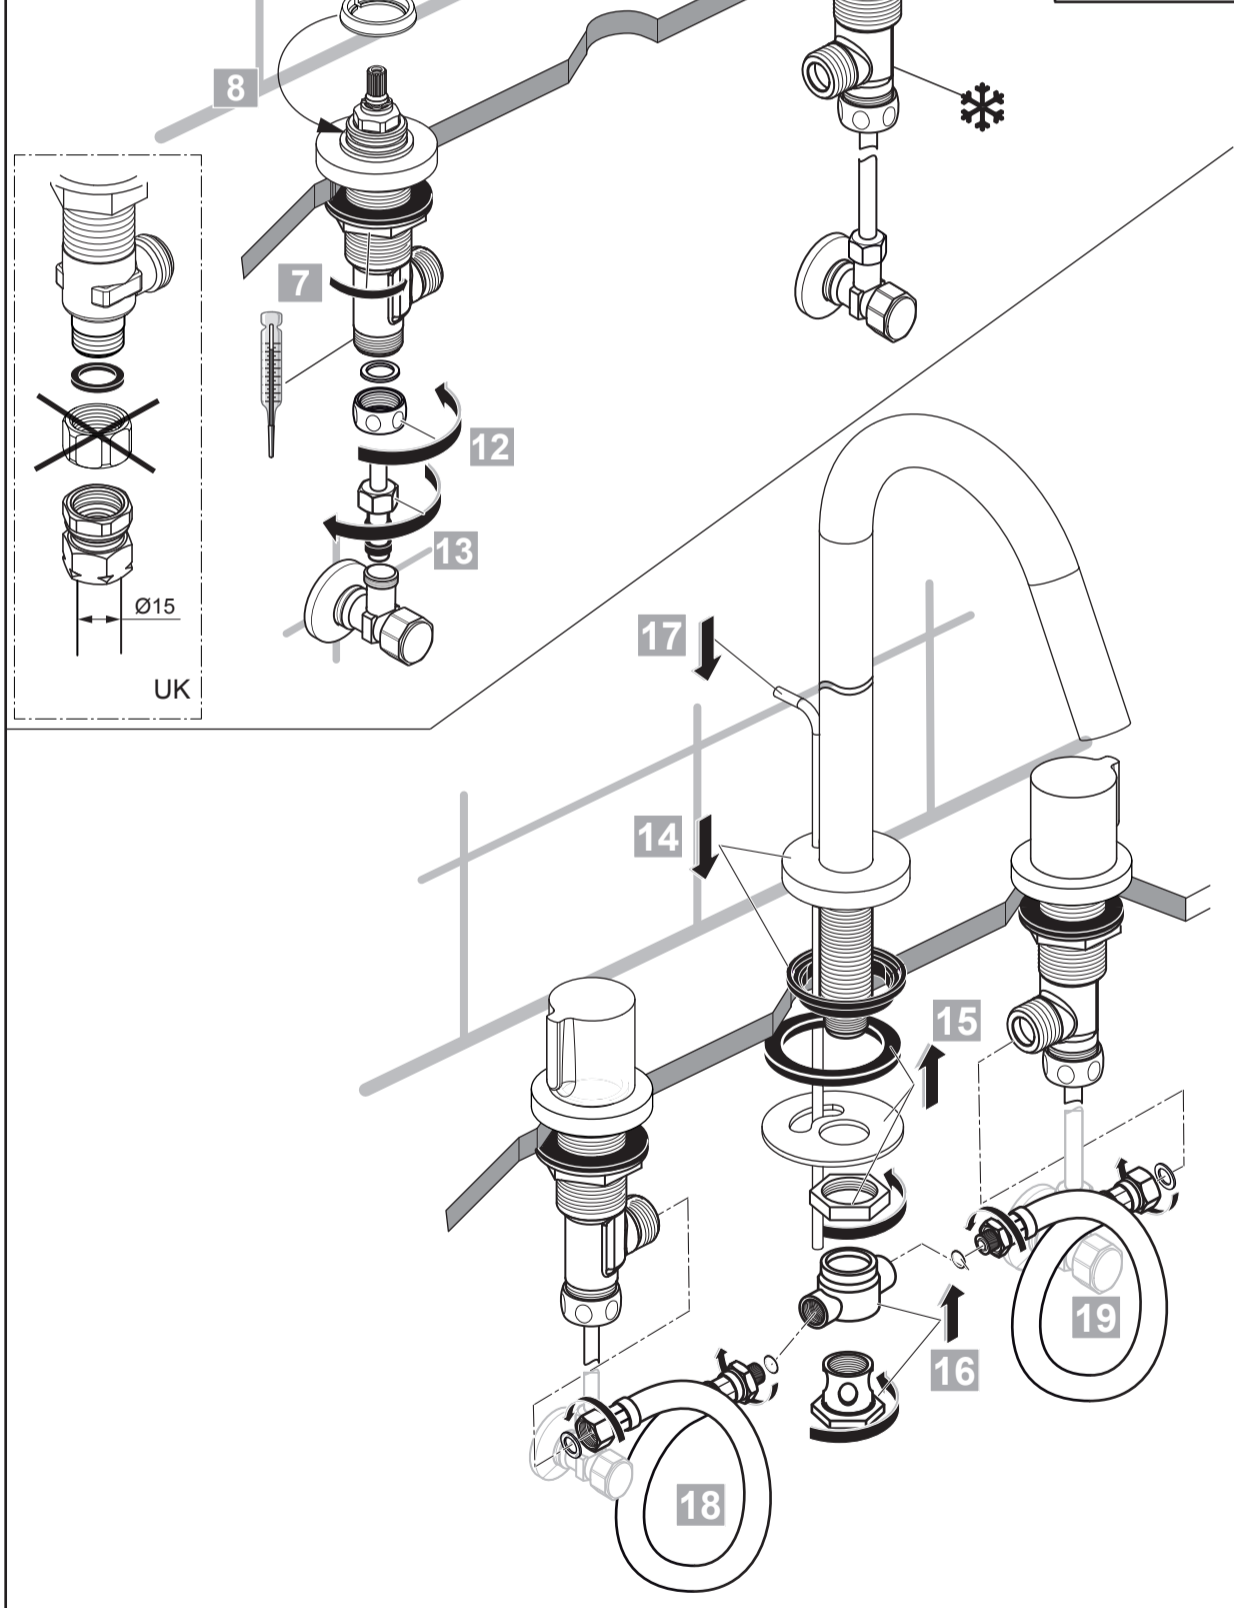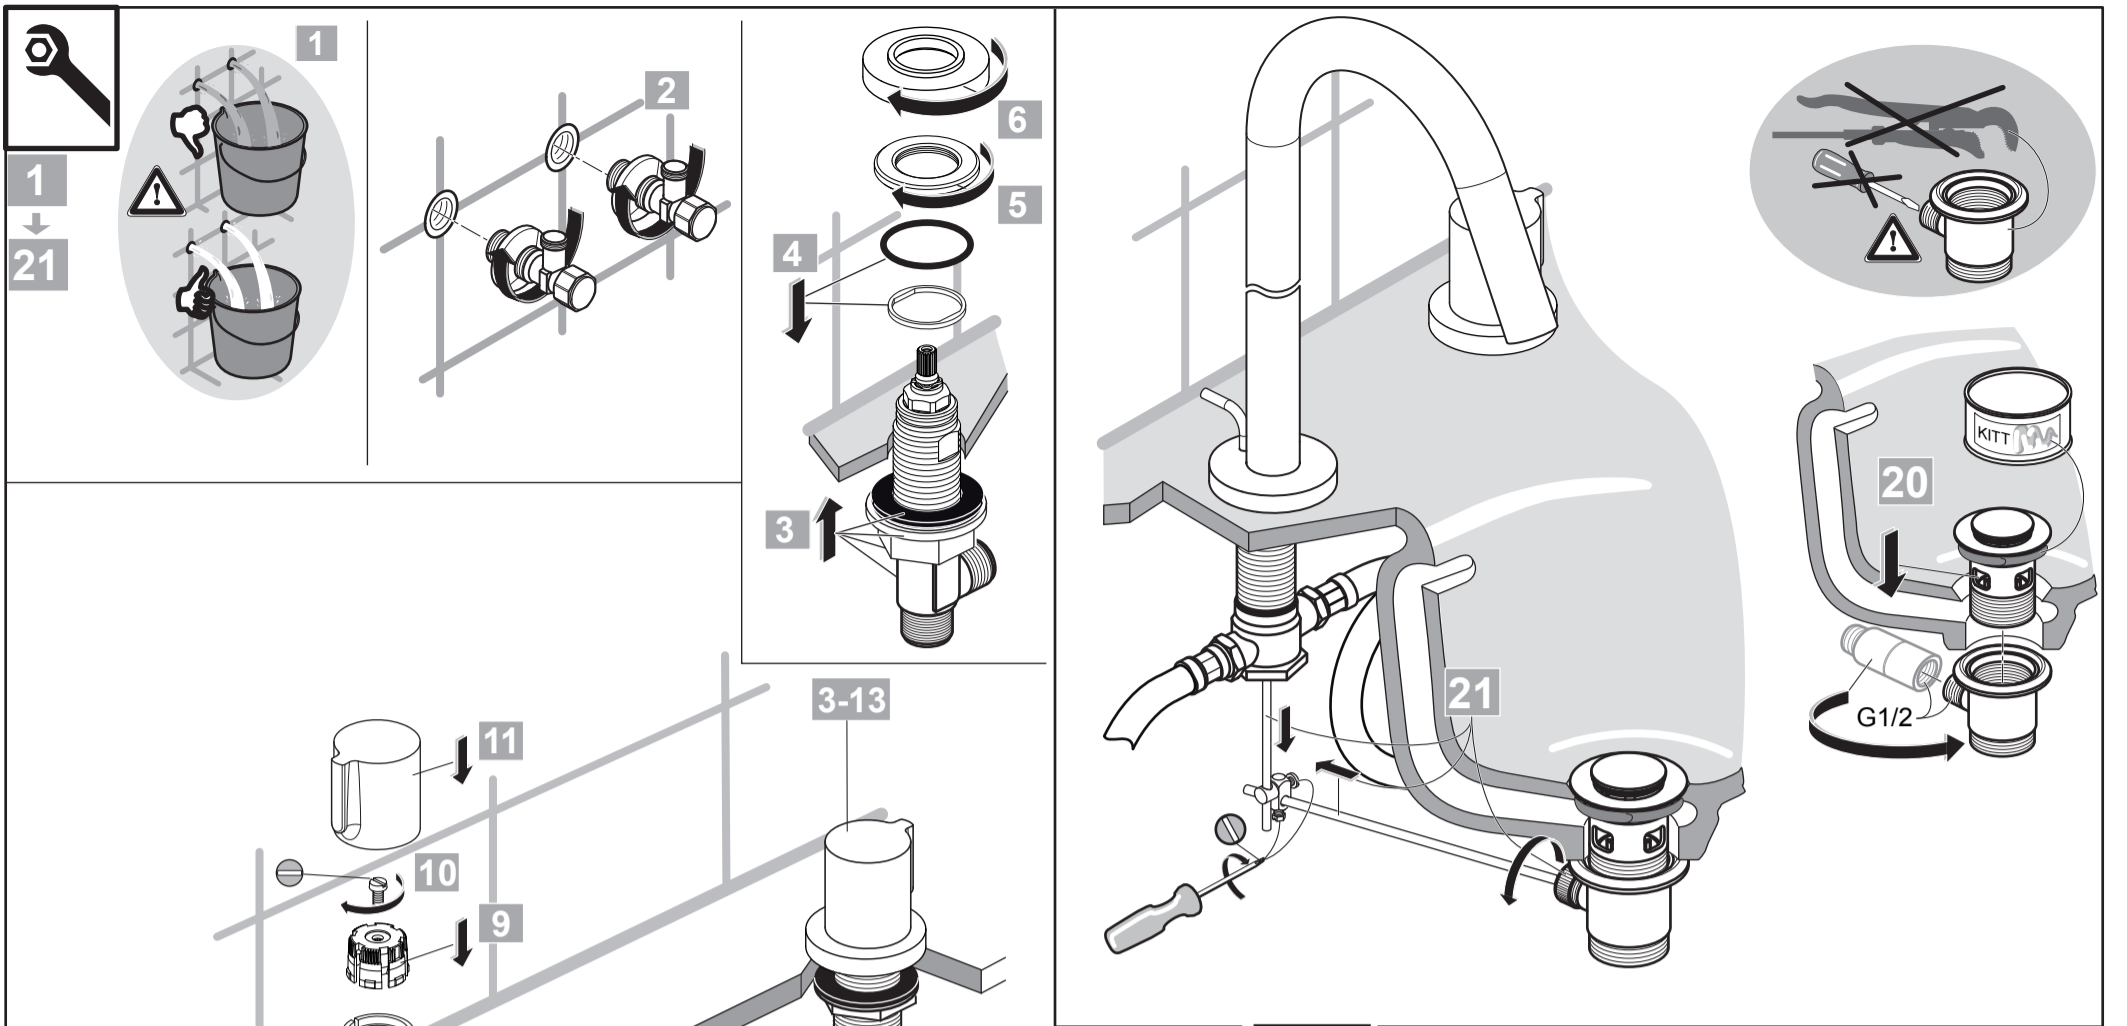

	<b>P</b> bar				<b>Q</b> (3 bar)
	<b>T</b> °C				<b>l/min</b> 5